



Quick Reference Guide

DMP 7060



Arm

1. Press **"CMD"** until **"ARM"** and **"DISARM"** are shown.
2. Press the button under **"ARM"**.
3. Enter your **4-digit user code** followed by **"CMD"**.
4. To Arm all areas, press the button under **"Yes"** at the **"All?"** prompt. To selectively Arm only certain areas, press the button under **"No"** at the **"All?"** prompt, then select **Yes** or **No** on the desired areas to be Armed.
5. The entry delay will begin, exit the building. If you need to cancel arming, press command until **"ARM"** and **"DISARM"** are displayed, then follow the normal process for Disarming.

Disarm

***If entering an Armed building/area and the entry delay is in progress, skip to step 3.**

1. Press the **"CMD"** button until **"ARM"** and **"DISARM"** are displayed.
2. Press the button under **"DISARM"** on the keypad.
3. Enter your **4-digit user code** then **"CMD"**.
4. To Disarm all areas, press the button under **"Yes"** at the **"All?"** prompt. To selectively disarm areas, press the button under **"No"** at the **"All?"** prompt, then select **Yes** or **No** on the desired areas to be disarmed.
5. If you are Disarming after an alarm has been triggered, you will be asked **"False Alarm Yes/No"**, choose the appropriate option, system will then be fully disarmed.

Viewing System/Sensor Status

1. Press **"CMD"** until **"Menu?"** appears on the display, press the button under **"Yes"**
2. Enter your **4-Digit code** then **"CMD"**
3. Press **"CMD"** again until **"Zone Status"** is shown, press the button below the word **"Zone"**
4. Pressing the button under **"ALR"** will show sensors that are open, the button under **"NBR"** will allow you to enter a specific zone number to check status.

Bypassing Zones

1. Follow the Arming procedure by pressing **"CMD"** until **"ARM"** and **"DISARM"** are displayed, pressing the button under **"ARM"**, then entering your **4-Digit code**, then **"CMD"**
2. A list of any Open/Troubled sensors will be displayed. You will then be given the choice to continue arming with them open (**OKAY**), Bypass any open sensors (**BYPASS**), or to Stop Arming (**STOP**). Unless there is a known issue with a sensor, it is recommended to choose Stop Arming and verify the sensor is closed before trying to Arm again.

Enable/Disable Door Chime

Press and hold the **5** key, a message will display showing **“Monitor On”** or **“Monitor Off”** – **On** = Chime enabled, **Off** = Chime disabled

Adjusting the Keypad Volume/Brightness

1. Press and hold the **“CMD”** and **Back Arrow (←)** key
2. The first option is brightness, use the far **left/right buttons** to adjust the brightness to preferred setting.
3. Press **“CMD”** to advance to tone, this will adjust the sound of the keypad tones which are also adjusted with the far left/right buttons.
4. Finally, pressing **“CMD”** again will show the Volume setting, again using the far left/right buttons to adjust.
5. Once you have the settings at the preferred level, leave the keypad as is and it will default back to the main screen.



1661 Greenview Dr. SW
Rochester, MN 55902



Scan to view our Resources page.

Follow us for the latest products, safety tips, and Custom Alarm news.



507.288.5522 | custom-alarm.com